| maxon motor control | ESCON Servo Controller |
|---------------------|------------------------|
| Hardware Reference | Edition November 2015 |

ESCON 36/3 EC

Servo Controller P/N 414533

Hardware Reference





Document ID: rel5870

TABLE OF CONTENTS

| 1 | About | | | 3 |
|---|----------|--------|-------------------------------|----|
| | | 1.1 | About this Document | 3 |
| | | 1.2 | About the Device | 4 |
| | | 1.3 | About the Safety Precautions | 5 |
| 2 | Specific | ations | s | 7 |
| | | 2.1 | Technical Data | 7 |
| | | 2.2 | Standards | 9 |
| 3 | Setup | | | 11 |
| | | 3.1 | Generally applicable Rules | 11 |
| | | 3.2 | Determination of Power Supply | 12 |
| | | 3.3 | Cabling | 13 |
| | | 3.4 | Connections | 14 |
| | | 3.5 | Potentiometers | 27 |
| | | 3.6 | Status Indicators | 28 |
| 4 | Wiring | | | 29 |

READ THIS FIRST

These instructions are intended for qualified technical personnel. Prior commencing with any activities ...

- you must carefully read and understand this manual and
- · you must follow the instructions given therein.

The ESCON 36/3 EC is considered as partly completed machinery according to EU Directive 2006/42/EC, Article 2, Clause (g) and is intended to be incorporated into or assembled with other machinery or other partly completed machinery or equipment.

Therefore, you must not put the device into service, ...

- unless you have made completely sure that the other machinery fully complies with the EU directive's requirements!
- unless the other machinery fulfills all relevant health and safety aspects!
- unless all respective interfaces have been established and fulfill the herein stated requirements!

1 About

1.1 About this Document

1.1.1 Intended Purpose

The purpose of the present document is to familiarize you with the ESCON 36/3 EC Servo Controller. It will highlight the tasks for safe and adequate installation and/or commissioning. Follow the described instructions ...

- · to avoid dangerous situations,
- · to keep installation and/or commissioning time at a minimum,
- · to increase reliability and service life of the described equipment.

The document contains performance data and specifications, information on fulfilled standards, details on connections and pin assignment, and wiring examples.

1.1.2 Target Audience

The present document is intended for trained and skilled personnel. It conveys information on how to understand and fulfill the respective work and duties.

1.1.3 How to use

Take note of the following notations and codes which will be used throughout the document.

| Notation | Meaning |
|----------|-----------------------------------------------------------|
| (n) | refers to an item (such as order number, list item, etc.) |
| → | denotes "see", "see also", "take note of" or "go to" |

Table 1-1 Notation used

1.1.4 Symbols & Signs

In the course of the present document, the following symbols and sings will be used.

| Туре | Symbol | Meaning | | | |
|----------------------|-----------|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|--|--|
| Safety Alert | (typical) | DANGER | Indicates an imminent hazardous situation . If not avoided, it will result in death or serious injury . | | |
| | | WARNING | Indicates a potential hazardous situation . If not avoided, it can result in death or serious injury . | | |
| | | CAUTION | Indicates a probable hazardous situation or calls the attention to unsafe practices. If not avoided, it may result in injury . | | |
| Prohibited Action | (typical) | Indicates a dangerous action. Hence, you must not! | | | |
| Mandatory Action | (typical) | Indicates a mandatory action. Hence, you must! | | | |

| Туре | Symbol | Meaning | | | |
|-------------|--------|--------------------------------|-------------------------------------------------------------------------------------------------------------------------|--|--|
| Information | | Requirement / Note / Remark | Indicates an activity you must perform prior continuing, or gives information on a particular item you need to observe. | | |
| | | Best Practice | Indicates an advice or recommendation on the easiest and best way to further proceed. | | |
| | ** | Material Damage | Indicates information particular to possible damage of the equipment. | | |

Table 1-2 Symbols & Signs

1.1.5 Trademarks and Brand Names

For easier legibility, registered brand names are listed below and will not be further tagged with their respective trademark. It must be understood that the brands (the list below is not necessarily concluding) are protected by copyright and/or other intellectual property rights even if their legal trademarks are omitted in the later course of this document.

| Brand Name | Trademark Owner |
|------------|------------------------------------------|
| Windows® | © Microsoft Corporation, USA-Redmond, WA |

Table 1-3 Brand Names and Trademark Owners

1.1.6 Copyright

© 2015 maxon motor. All rights reserved.

The present document – including all parts thereof – is protected by copyright. Any use (including reproduction, translation, microfilming, and other means of electronic data processing) beyond the narrow restrictions of the copyright law without the prior approval of maxon motor ag, is not permitted and subject to prosecution under the applicable law.

maxon motor ag

 Brünigstrasse 220
 Phone +41 41 666 15 00

 P.O.Box 263
 Fax +41 41 666 16 50

 CH-6072 Sachseln
 Web www.maxonmotor.com

1.2 About the Device

The ESCON 36/3 EC is a small-sized, powerful 4-quadrant PWM servo controller for the highly efficient control of permanent magnet-activated brushless EC motors up to approximately 97 Watts.

The featured operating modes – speed control (closed loop), speed control (open loop), and current control – meet the highest requirements. The ESCON 36/3 EC is designed being commanded by an analog set value and features extensive analog and digital I/O functionality.

The device is designed to be configured via USB interface using the graphical user interface «ESCON Studio» for Windows PCs.

You can download the latest ESCON software version (as well as the latest edition of the documentation) from the internet under →http://escon.maxonmotor.com.

About About Precautions

1.3 About the Safety Precautions

- · Make sure that you have read and understood the note "READ THIS FIRST" on page A-2!
- Do not engage with any work unless you possess the stated skills (→chapter "1.1.2 Target Audience" on page 1-3)!
- Refer to → chapter "1.1.4 Symbols & Signs" on page 1-3 to understand the subsequently used indicators!
- You must observe any regulation applicable in the country and/or at the site of implementation with regard to health and safety/accident prevention and/or environmental protection!



DANGER

High Voltage and/or Electrical Shock

Touching live wires causes death or serious injuries!

- Consider any power cable as connected to live power, unless having proven the opposite!
- Make sure that neither end of cable is connected to live power!
- Make sure that power source cannot be engaged while work is in process!
- Obey lock-out/tag-out procedures!
- Make sure to securely lock any power engaging equipment against unintentional engagement and tag it with your name!



Requirements

- Make sure that all associated devices and components are installed according to local regulations.
- Be aware that, by principle, an electronic apparatus can not be considered fail-safe. Therefore, you
 must make sure that any machine/apparatus has been fitted with independent monitoring and safety
 equipment. If the machine/apparatus should break down, if it is operated incorrectly, if the control unit
 breaks down or if the cables break or get disconnected, etc., the complete drive system must return –
 and be kept in a safe operating mode.
- Be aware that you are not entitled to perform any repair on components supplied by maxon motor.



Electrostatic Sensitive Device (ESD)

- Make sure to wear working cloth in compliance with ESD.
- Handle device with extra care.

About the Safety Precautions

••page intentionally left blank••

2 Specifications

2.1 Technical Data

| ESCON 36/3 EC (414533) | | | | |
|------------------------|------------------------------------------------------------------------|---------------------------------------------------------------|--|--|
| | Nominal operating voltage +V _{CC} | 1036 VDC | | |
| | Absolute operating voltage +V _{CC min} / +V _{CC max} | 8 VDC / 38 VDC | | |
| | Output voltage (max.) | 0.98 x +V _{cc} | | |
| | Output current I _{cont} / I _{max} (<4 s) | 2.7 A / 9 A | | |
| Electrical Rating | Pulse Width Modulation frequency | 53.6 kHz | | |
| | Sampling rate PI current controller | 53.6 kHz | | |
| | Sampling rate PI speed controller | 5.36 kHz | | |
| | Max. efficiency | 95% | | |
| | Max. speed | 150'000 rpm (1 pole pair) | | |
| | Built-in motor chokes | 3 x 47 μH; 2.7 A | | |
| | Analog Input 1 Analog Input 2 | resolution 12-bit; −10+10 V; differential | | |
| | Analog Output 1 Analog Output 2 | resolution 12-bit; -4+4 V; referenced to GND | | |
| Inputs & Outputs | Digital Input 1 Digital Input 2 | +2.4+36 VDC (R_i = 38.5 kΩ) | | |
| | Digital Input/Output 3 Digital Input/Output 4 | +2.4+36 VDC (R_i = 38.5 kΩ) / max. 36 VDC (I_L <500 mA) | | |
| | Hall sensor signals | H1, H2, H3 | | |
| Voltage Outputs | Auxiliary output voltage | +5 VDC (I _L ≤80 mA) | | |
| Voltage Outputs | Hall sensor supply voltage | +5 VDC (I _L ≤30 mA) | | |
| Potentiometer | Potentiometer P1 (on board) | 210°; linear | | |
| Motor Connections | EC motor | Motor winding 1, Motor winding 2, Motor winding 3 | | |
| Interface | USB 2.0 / USB 3.0 | full speed | | |
| Status Indicators | Operation | green LED | | |
| Ciatus maicators | Error | red LED | | |
| | Weight | approx. 36 g | | |
| Physical | Dimensions (L x W x H) | 55 x 40 x 19.8 mm | | |
| | Mounting holes | for M2.5 screws | | |

| ESCON 36/3 EC (414533) | | | | |
|----------------------------|--------------------|-----------------------------------|--------------------------------------------|--|
| Temperature Environmental | | Operation | −30+45 °C | |
| | Extended range *1) | +45+78 °C Derating →Figure 2-1 | | |
| | | Storage | -40+85 °C | |
| | Altitude *2) | Operation | 06'000 m MSL | |
| | | Extended range *1) | 6'00010'000 m MSL Derating → Figure 2-1 | |
| | Humidity | 590% (condensation not permitted) | | |

- *1) Operation within the extended range (temperature and altitude) is permitted. However, a respective derating (declination of output current I_{conf}) as to the stated values will apply.
- *2) Operating altitude in meters above Mean Sea Level, MSL.

Table 2-4 Technical Data




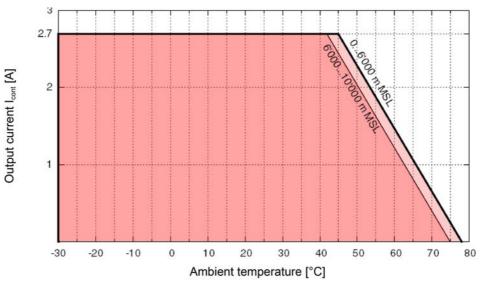


Figure 2-1 Derating Output Current

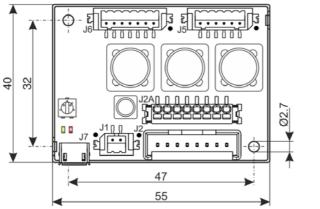

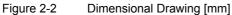

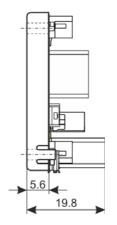

2.2 Standards

The described device has been successfully tested for compliance with the below listed standards. In practical terms, only the complete system (the fully operational equipment comprising all individual components, such as motor, servo controller, power supply unit, EMC filter, cabling etc.) can undergo an EMC test to ensure interference-free operation.



Important Notice

The device's compliance with the mentioned standards does not imply its compliance within the final, ready to operate setup. In order to achieve compliance of your operational system, you must perform EMC testing of the involved equipment as a whole.

| Electromagnetic Compatibility | | | |
|-------------------------------|-----------------------------------------------|---------------------------------------------------------------------------------|--|
| Generic Standards | IEC/EN 61000-6-2 | Immunity for industrial environments | |
| | IEC/EN 61000-6-3 | Emission standard for residential, commercial and light-industrial environments | |
| Applied Standards | IEC/EN 61000-6-3 IEC/EN 55022 (CISPR22) | Radio disturbance characteristics / radio interference | |
| | IEC/EN 61000-4-3 | Radiated, radio-frequency, electromagnetic field immunity test >10 V/m | |
| | IEC/EN 61000-4-4 | Electrical fast transient/burst immunity test ±2 kV | |
| | IEC/EN 61000-4-6 | Immunity to conducted disturbances, induced by radio-frequency fields 10 Vrms | |

| | Others | | |
|----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|--|
| Environmental Standards | IEC/EN 60068-2-6 | Environmental testing – Test Fc: Vibration (sinusoidal, 10500 Hz, 20 m/s²) | |
| Standards | MIL-STD-810F | Random transport (10500 Hz up to 2.53 g _{rms}) | |
| Safety Standards | UL File Number E207844; unassembled printed circuit board | | |
| Reliability | Reliability prediction of electronic equipment Environment: Ground, benign (GB) Ambient temperature: 298 K (25 °C) Component stress: In accordance with circuit diagram nominal power Mean Time Between Failures (MTBF): 403'301 hours | | |

Table 2-5 Standards

Specifications Standards

••page intentionally left blank••

3 Setup

IMPORTANT NOTICE: PREREQUISITES FOR PERMISSION TO COMMENCE INSTALLATION

The ESCON 36/3 EC is considered as partly completed machinery according to EU Directive 2006/42/ EC, Article 2, Clause (g) and is intended to be incorporated into or assembled with other machinery or other partly completed machinery or equipment.



WARNING

Risk of Injury

Operating the device without the full compliance of the surrounding system with EU Directive 2006/42/EC may cause serious injuries!

- Do not operate the device, unless you have made completely sure that the other machinery fully complies with the EU directive's requirements!
- Do not operate the device, unless the other machinery fulfills all relevant health and safety aspects!
- Do not operate the device, unless all respective interfaces have been established and fulfill the requirements stated in this document!

3.1 Generally applicable Rules

For each possible motor variant you will find information on the from/to connections and the cables you will require. If you should decide not to use the ready-made maxon cables, you must establish the respective connections as to \rightarrow chapter "3.4.7 ESCON 36/3 EC Connector Set" on page 3-27 and \rightarrow chapter "4 Wiring" on page 4-29.



Maximal permitted Supply Voltage

- Make sure that supply power is between 10...36 VDC.
- Supply voltages above 38 VDC, or wrong polarity will destroy the unit.
- Note that the necessary output current is depending on the load torque. Yet, the output current limits
 of the ESCON 36/3 EC are as follows; continuous max. 2.7 A / short-time (acceleration) max. 9 A.



How to read the Wiring Details

The subsequent description follows this scheme:

- Column "J... & Head A": Pin number...
 - of the socket,
 - of the corresponding plug, and
 - of Head A of the matching prefab maxon cable.
- Column "Prefab Cable": Wire color of the prefab maxon cable.
- Column "Head B": Pin number of Head B of the matching prefab maxon cable.

3.2 Determination of Power Supply

Basically, any power supply may be used, provided it meets the minimal requirements stated below.

| Power Supply Requirements | | |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------|--|
| Output voltage | +V _{CC} 1036 VDC | |
| Absolute output voltage | min. 8 VDC; max. 38 VDC | |
| Output current | Depending on load continuous max. 2.7 A short-time (acceleration, <4 s) max. 9 A | |

- 1) Use the formula below to calculate the required voltage under load.
- 2) Choose a power supply according to the calculated voltage. Thereby consider:
 - a) During braking of the load, the power supply must be capable of buffering the recovered kinetic energy (for example, in a capacitor).
 - b) If you are using an electronically stabilized power supply, make sure that the overcurrent protection circuit is configured inoperative within the operating range.



Note

The formula already takes the following into account:

- Maximum PWM duty cycle of 98%
- Controller's max. voltage drop of 1 V @ 2.7 A

KNOWN VALUES:

- · Operating torque M [mNm]
- Operating speed n [rpm]
- Nominal motor voltage U_N [Volt]
- Motor no-load speed at U_N, n₀ [rpm]
- Speed/torque gradient of the motor Δn/ΔM [rpm/mNm]

SOUGHT VALUE:

Supply voltage +V_{CC} [Volt]

SOLUTION:

$$V_{CC} \ge \left[\frac{U_N}{n_O} \cdot \left(n + \frac{\Delta n}{\Delta M} \cdot M\right) \cdot \frac{1}{0.98}\right] + 1[V]$$

3.3 Cabling

Here you can get the connection information required to commission your ESCON 36/3 EC. You will find all details for both approaches, Plug&Play and making your own cables.

PLUG&PLAY

Take advantage of maxon's prefab cable assemblies. They come as ready-to-use parts and will help you to reduce commissioning time to a minimum.

- a) Check the «Cable Selector» (→ Table 3-6) to find the cable assemblies' order number matching the setup you will be using.
- b) Follow the cross-reference to get the cable assemblies' pin assignment.

MAKE&BAKE YOUR OWN

- a) Check the «Cable Selector» (→Table 3-6) to find the required cables for the setup you will be using.
- b) Follow the cross-reference to get the cable's specification and pin assignment.
- Utilize the installation kit (→ page 3-27) containing plugs and terminals that will fit the controller's sockets.

| Cable / Adapter | | | der | EC Motor with | |
|-------------------------------------|-----------------|-----------|-----------------|---------------|-----------------------|
| Designation | Order number | → page | Socket / Header | Cable | Flexprint Cable (FPC) |
| Power Cable | 403957 | 3-14 | J1 | Х | Х |
| I/O Cable 6core | 403965 | 3-18 | J5 | Х | Х |
| I/O Cable 7core | 403964 | 3-22 | J6 | 0 | 0 |
| USB Type A - micro B Cable | 403968 | 3-24 | J7 | Х | Х |
| Adapter BLACK FPC11poles | 418719 | 3-25 | J2 | | 0 |
| Adapter BLUE FPC8poles | 418723 | 3-26 | J2 | | 0 |
| Adapter GREEN FPC8poles | 418721 | 3-26 | J2 | | 0 |
| Legend: X = required / O = optional | | | | | |

Table 3-6 Cable Selector

3.4 Connections

The actual connection will depend on the overall configuration of your drive system and the type of motor you will be using. Some connections must be established in a given way, while for motor/Hall sensor (J2/J2A alternative plug-in locations can be chosen from.

Follow the description in given order and choose the connection scheme that suits the respective components you are using. For corresponding wiring diagrams → chapter "4 Wiring" on page 4-29.

3.4.1 Power (J1)



Figure 3-3 Power Socket J1

| J1 & Head A Pin | Prefab Cable Color | Head B | Signal | Description |
|-----------------------|--------------------------|--------|------------------|-----------------------------------|
| 1 | white | _ | Power_GND | Ground of supply voltage |
| 2 | brown | + | +V _{CC} | Power supply voltage (+10+36 VDC) |

Table 3-7 Power Socket J1 – Pin Assignment & Cabling

| Power Cable (403957) | | | | |
|--------------------------------------------------------|----------------------------|--|--|--|
| A 21 | | | | |
| Cable cross-section | 2 x 0.34 mm ² | | | |
| Length | 1.5 m | | | |
| Head A Suitable plugs Hirose DF3-2S-2C Hirose DF3-22SC | | | | |
| Head B | Cable end sleeves 0.34 mm² | | | |

Table 3-8 Power Cable

3.4.2 Motor / Hall Sensor (J2 / J2A)



Potential Destruction

Use only one of the two connectors - either J2 or J2A!

HEADER J2

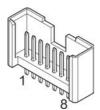


Figure 3-4 Motor / Hall Sensor Header J2



Best Practice

 For EC motors with built-in FPC (Flexprint cable), you might wish to use one of the ready-made adapters. For details → "Cable Selector" on page 3-13.

| J2 & Head A | Prefab Cable | Head B | Signal | Description |
|----------------|-----------------|--------|-----------------|------------------------------------------------------------|
| Pin | Color | Pin | | |
| 1 | | | Motor winding 1 | EC motor: Winding 1 |
| 2 | | | Motor winding 2 | EC motor: Winding 2 |
| 3 | | | Motor winding 3 | EC motor: Winding 3 |
| 4 | | | +5 VDC | Hall sensor supply voltage (+5 VDC; I _L ≤30 mA) |
| 5 | | | GND | Ground |
| 6 | | | Hall sensor 1 | Hall sensor 1 input |
| 7 | | | Hall sensor 2 | Hall sensor 2 input |
| 8 | | | Hall sensor 3 | Hall sensor 3 input |

Table 3-9 Motor / Hall Sensor Header J2 – Pin Assignment & Cabling

| Specification / Accessories | | | | |
|-----------------------------|--------------------------------------------------------------------|--|--|--|
| Туре | Mini module pin header, upright, single row, 8 poles, pitch 2.5 mm | | | |
| Suitable plugs | Lumberg crimping socket, 8 poles (3114 08) | | | |
| Suitable contacts | Lumberg crimping contact for socket (3111 03) | | | |
| Suitable tools | Lumberg hand crimper (CZ31) | | | |

Table 3-10 Motor / Hall Sensor Header J2 – Specification & Accessories

For circuitry → Figure 3-6.

SOCKET J2A

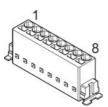


Figure 3-5 Motor / Hall Sensor Socket J2A

| J2 & Head A | Prefab Cable | Head B | Signal | Description |
|----------------|-----------------|--------|-----------------|------------------------------------------------------------|
| Pin | Color | Pin | | |
| 1 | | | Motor winding 1 | EC motor: Winding 1 |
| 2 | | | Motor winding 2 | EC motor: Winding 2 |
| 3 | | | Motor winding 3 | EC motor: Winding 3 |
| 4 | | | +5 VDC | Hall sensor supply voltage (+5 VDC; I _L ≤30 mA) |
| 5 | | | GND | Ground |
| 6 | | | Hall sensor 1 | Hall sensor 1 input |
| 7 | | | Hall sensor 2 | Hall sensor 2 input |
| 8 | | | Hall sensor 3 | Hall sensor 3 input |

Table 3-11 Motor / Hall Sensor Socket J2A – Pin Assignment & Cabling

| Specification / Accessories | | | |
|-----------------------------|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|--|
| Туре | Spring-loaded contacts, 8 poles, pitch 2.5 mm | | |
| | Rigid | 0.140.5 mm², AWG 26-20 / wire stripping length 6 mm | |
| Suitable cables | Flexible | 0.20.5 mm², AWG 24-20 / wire stripping length 6 mm 0.250.5 mm², AWG 24-20 / wire stripping length 6 mm, cable end sleeves | |
| Suitable tools | Miniature screwdriver, size "00" | | |

Table 3-12 Motor / Hall Sensor Socket J2A – Specification & Accessories

| Hall sensor supply voltage | +5 VDC |
|---------------------------------|----------------------------------|
| Max. Hall sensor supply current | 30 mA |
| Input voltage | 024 VDC |
| Max. input voltage | +24 VDC |
| Logic 0 | typically <1.0 V |
| Logic 1 | typically >2.4 V |
| Internal pull-up resistor | 2.7 kΩ (against +5.45 V − 0.6 V) |

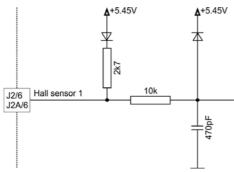


Figure 3-6 Hall Sensor Input Circuit (analogously valid also for Hall Sensors 2 & 3)

3.4.3 Digital I/Os (J5)



Figure 3-7 Digital I/Os Socket J5

| J5 & Head A | Prefab Cable | Head B | Signal | Description |
|----------------|-----------------|--------|---------------|-------------------------------------------|
| Pin | Color | Pin | | |
| 1 | white | | DigIN1 | Digital input 1 |
| 2 | brown | | DigIN2 | Digital input 2 |
| 3 | green | | DigIN/DigOUT3 | Digital input/output 3 |
| 4 | yellow | | DigIN/DigOUT4 | Digital input/output 4 |
| 5 | grey | | GND | Signal ground |
| 6 | pink | | +5 VDC | Auxiliary output voltage (+5 VDC; ≤80 mA) |

Table 3-13 Digital I/Os Socket J5 – Pin Assignment & Cabling


| I/O Cable 6core (403965) | | | | | |
|----------------------------------------------------------------------------|----------------------------------------|--------------------------|--|--|--|
| | | | | | |
| Cable cross-section | 6 x 0.14 mm ² | 6 x 0.14 mm ² | | | |
| Length | 1.5 m | 1.5 m | | | |
| Head A Suitable plugs Hirose DF3-6S-2C Suitable contacts Hirose DF3-2428SC | | | | | |
| Head B | Cable end sleeves 0.14 mm ² | | | | |

Table 3-14 I/O Cable 6core

3.4.3.1 Digital Input 1


| Input voltage | 036 VDC |
|--------------------------|-------------------------------------------------------------------------------------------------------|
| Max. input voltage | +36 VDC / -36 VDC |
| Logic 0 | typically <1.0 V |
| Logic 1 | typically >2.4 V |
| Input resistance | typically 47 k Ω (<3.3 V) typically 38.5 k Ω (@ 5 V) typically 25.5 k Ω (@ 24 V) |
| Input current at logic 1 | typically 130 μA @ 5 VDC |
| Switching delay | <8 ms |

| PWM frequency range | 10 Hz5 kHz |
|-----------------------------------|--------------|
| PWM duty cycle range (resolution) | 1090% (0.1%) |
| RC Servo cycle duration | 330 ms |
| RC Servo pulse length | 12 ms |

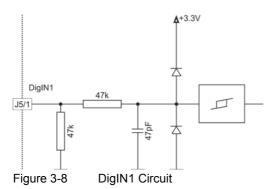

3.4.3.2 Digital Input 2

| Input voltage | 036 VDC |
|--------------------------|-------------------------------------------------------------------------------------------------------|
| Max. input voltage | +36 VDC / -36 VDC |
| Logic 0 | typically <1.0 V |
| Logic 1 | typically >2.4 V |
| Input resistance | typically 47 k Ω (<3.3 V) typically 38.5 k Ω (@ 5 V) typically 25.5 k Ω (@ 24 V) |
| Input current at logic 1 | typically 130 μA @ 5 VDC |
| Switching delay | <8 ms |

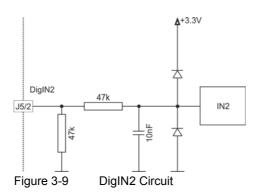

3.4.3.3 Digital Inputs/Outputs 3 and 4

| DigIN | | |
|--------------------------|-------------------------------------------------------------------------------------------------------|--|
| Input voltage | 036 VDC | |
| Max. input voltage | +36 VDC | |
| Logic 0 | typically <1.0 V | |
| Logic 1 | typically >2.4 V | |
| Input resistance | typically 47 k Ω (<3.3 V) typically 38.5 k Ω (@ 5 V) typically 25.5 k Ω (@ 24 V) | |
| Input current at logic 1 | typically 130 μA @ 5 VDC | |
| Switching delay | <8 ms | |

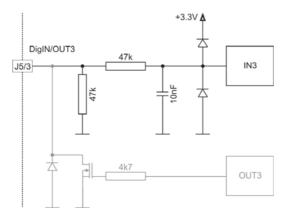


Figure 3-10 DigIN3 Circuit (analogously valid also for DigIN4)

| DigOUT | | |
|----------------------|-------------------------|--|
| Max. input voltage | +36 VDC | |
| Max. load current | 500 mA | |
| Max. voltage drop | 0.5 V @ 500 mA | |
| Max. load inductance | 100 mH @ 24 VDC; 500 mA | |

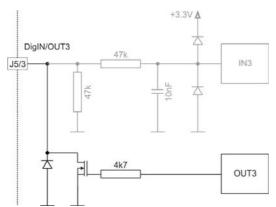


Figure 3-11 DigOUT3 Circuit (analogously valid also for DigOUT4)

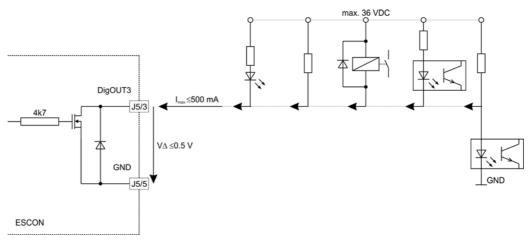


Figure 3-12 DigOUT3 Wiring Examples (analogously valid also for DigOUT4)

3.4.4 Analog I/Os (J6)



Figure 3-13 Analog I/Os Socket J6

| J6 & Head A | Prefab Cable | Head B | Signal | Description |
|----------------|-----------------|--------|--------|---------------------------------|
| Pin | Color | Pin | | |
| 1 | white | | AnIN1+ | Analog input 1, positive signal |
| 2 | brown | | AnIN1- | Analog input 1, negative signal |
| 3 | green | | AnIN2+ | Analog input 2, positive signal |
| 4 | yellow | | AnIN2- | Analog input 2, negative signal |
| 5 | grey | | AnOUT1 | Analog output 1 |
| 6 | pink | | AnOUT2 | Analog output 2 |
| 7 | blue | | GND | Signal ground |

Table 3-15 Analog I/Os Socket J6 – Pin Assignment & Cabling

| I/O Cable 7core (403964) | | | |
|----------------------------------------------------------|----------------------------------------|---|--|
| 7 | | В | |
| Cable cross-section | 7 x 0.14 mm ² | | |
| Length | 1.5 m | | |
| Head A Suitable plugs Hirose DF3-7S-2C Hirose DF3-2428SC | | | |
| Head B | Cable end sleeves 0.14 mm ² | | |

Table 3-16 I/O Cable 7core

3.4.4.1 Analog Inputs 1 and 2

| Input voltage | -10+10 VDC (differential) |
|---------------------|-----------------------------------------------------------------|
| Max. input voltage | +24 VDC / -24 VDC |
| Common mode voltage | -5+10 VDC (referenced to GND) |
| Input resistance | 100 k Ω (differential) 50 k Ω (referenced to GND) |
| A/D converter | 12-bit |
| Resolution | 5.07 mV |
| Bandwidth | 10 kHz |

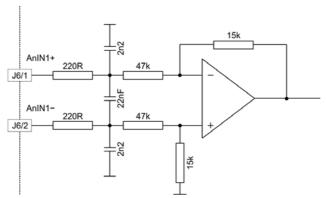


Figure 3-14 AnIN1 Circuit (analogously valid also for AnIN2)

3.4.4.2 Analog Outputs 1 and 2

| Output voltage | -4+4 VDC |
|--------------------------------------|-------------------------------------|
| D/A converter | 12-bit |
| Resolution | 2.30 mV |
| Refresh rate | AnOUT1: 26.8 kHz AnOUT2: 5.4 kHz |
| Analog bandwidth of output amplifier | 20 kHz |
| Max. capacitive load | 10 nF |
| Max. output current | 1 mA |

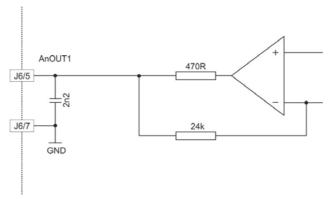


Figure 3-15 AnOUT1 Circuit (analogously valid also for AnOUT2)

3.4.5 **USB (J7)**



USB Socket J7



Note

Column "Head B" (→Table 3-17) refers to USB terminals of your PC.

| J7 & Head A | Prefab Cable | Head B | Signal | Description |
|----------------|-----------------|--------|------------------|-------------------------------------|
| Pin | Color | Pin | | |
| 1 | | 1 | V _{BUS} | USB BUS supply voltage input +5 VDC |
| 2 | | 2 | D- | USB Data- (twisted pair with Data+) |
| 3 | | 3 | D+ | USB Data+ (twisted pair with Data-) |
| 4 | | _ | ID | not connected |
| 5 | | 4 | GND | USB ground |

USB Socket J7 - Pin Assignment & Cabling Table 3-17

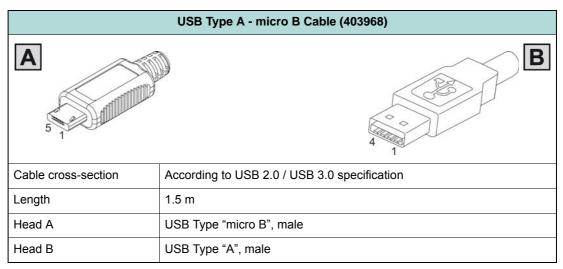


Table 3-18 USB Type A - micro B Cable

| USB Standard | USB 2.0 / USB 3.0 (full speed) |
|----------------------------|--------------------------------|
| Max. bus supply voltage | +5.25 VDC |
| Typical input current | 60 mA |
| Max. DC data input voltage | -0.5+3.8 VDC |

3.4.6 Adapters for maxon EC motors with Flexprint Cable (FPC)

Use the ready-made adapters for easy connection of maxon EC motors with built-in FPC (Flexprint cable). The adapters are color-coded and match the following motors:

| Adapter | | | | Suitable mot sensors (not | |
|-----------------|---------------------------|-------|-------|----------------------------------------------------------|-------------------------------------------|
| Order number | Designation | Color | Poles | Туре | Rating [W] |
| 418719 | Adapter BLACK FPC11poles | black | 11 | EC 10 EC 13 EC 20 flat EC 32 flat EC 45 flat | 8 6 / 12 3 / 5 6 / 15 12 / 30 |
| 418723 | Adapter BLUE FPC8poles | blue | 8 | EC 6 EC 8 EC 9.2 flat | 1.5 / 2 2 0.5 |
| 418721 | Adapter GREEN FPC8poles | green | 8 | EC 6 EC 10 flat | 1.2 0.2 |

Table 3-19 Adapters for Flexprint Cables

ADAPTER BLACK FPC11POLES



Figure 3-17 Adapter BLACK FPC11poles

| Adapter BLACK Pin | Signal | Description |
|-------------------------|-----------------|------------------------------------------------------------|
| 1 | +5 VDC | Hall sensor supply voltage (+5 VDC; I _L ≤30 mA) |
| 2 | Hall sensor 3 | Hall sensor 3 input |
| 3 | Hall sensor 1 | Hall sensor 1 input |
| 4 | Hall sensor 2 | Hall sensor 2 input |
| 5 | GND | Ground |
| 6 | Motor winding 3 | EC motor: Winding 3 |
| 7 | Motor winding 3 | EC motor: Winding 3 |
| 8 | Motor winding 2 | EC motor: Winding 2 |
| 9 | Motor winding 2 | EC motor: Winding 2 |
| 10 | Motor winding 1 | EC motor: Winding 1 |
| 11 | Motor winding 1 | EC motor: Winding 1 |

Table 3-20 Adapter BLACK FPC11poles – Pin Assignment

ADAPTER BLUE FPC8POLES



Figure 3-18 Adapter BLUE FPC8poles

| Adapter BLUE | Signal | Description | |
|-----------------|-----------------|------------------------------------------------------------|--|
| Pin | | | |
| 1 | Motor winding 1 | EC motor: Winding 1 | |
| 2 | Motor winding 2 | EC motor: Winding 2 | |
| 3 | Motor winding 3 | EC motor: Winding 3 | |
| 4 | +5 VDC | Hall sensor supply voltage (+5 VDC; I _L ≤30 mA) | |
| 5 | GND | Ground | |
| 6 | Hall sensor 1 | Hall sensor 1 input | |
| 7 | Hall sensor 2 | Hall sensor 2 input | |
| 8 | Hall sensor 3 | Hall sensor 3 input | |

Table 3-21 Adapter BLUE FPC8poles – Pin Assignment

ADAPTER GREEN FPC8POLES



Figure 3-19 Adapter GREEN FPC8poles

| Adapter GREEN Pin | Signal | Description |
|-------------------------|-----------------|------------------------------------------------------------|
| FIII | | |
| 1 | Motor winding 3 | EC motor: Winding 3 |
| 2 | Motor winding 2 | EC motor: Winding 2 |
| 3 | Hall sensor 3 | Hall sensor 3 input |
| 4 | +5 VDC | Hall sensor supply voltage (+5 VDC; I _L ≤30 mA) |
| 5 | GND | Ground |
| 6 | Hall sensor 1 | Hall sensor 1 input |
| 7 | Hall sensor 2 | Hall sensor 2 input |
| 8 | Motor winding 1 | EC motor: Winding 1 |

Table 3-22 Adapter GREEN FPC8poles – Pin Assignment

3.4.7 ESCON 36/3 EC Connector Set

If you decide not to employ maxon motor's prefab cable assemblies, you might wish to use the prepackaged kit that contains all connectors required to make up your own cabling.

| «ESCON 36/3 EC Connector Set» (425255) | | | | |
|----------------------------------------|-------------------------------------------------|----------|--|--|
| For Socket | Specification | Quantity | | |
| J1 | Hirose crimping socket, 2 poles (DF3-2S-2C) | 1 | | |
| J1 | Hirose crimping contact for socket (DF3-22SC) | 3 | | |
| J5 | Hirose crimping socket, 6 poles (DF3-6S-2C) | 1 | | |
| J5, J6 | Hirose crimping contact for socket (DF3-2428SC) | 14 | | |
| J6 | Hirose crimping socket, 7 poles (DF3-7S-2C) | 1 | | |

Table 3-23 ESCON 36/3 EC Connector Set – Content



Best Practice

If you should decide not to use the ready-made cable assemblies, we strongly suggest that you use the following hand tools:

- Hirose hand crimper (DF3-TA22HC) for crimping contacts DF3-22SC...
- Hirose hand crimper (DF3-TA2428HC) for crimping contacts DF3-2428SC...
- Lumberg hand crimper (CZ31) for crimping contacts 3111 03

3.5 Potentiometers

POTENTIOMETER P1

| Adjustment angle | 210° |
|------------------|--------|
| Туре | Linear |

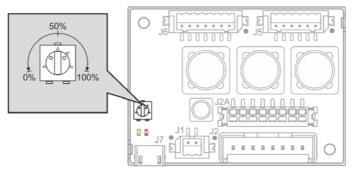


Figure 3-20 Potentiometer P1 – Location & Adjustment Range

3.6 Status Indicators

Light-emitting diodes (LEDs) indicate the actual operating status (green) and possible errors (red).

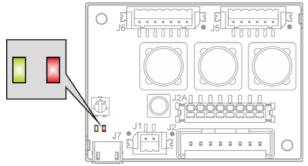


Figure 3-21 LEDs – Location

| | -D | | | |
|------------------|-----|----------------|-----------------------------------------------------------------------------------------------------------------------------|--|
| LED Green Red | | Status / Error | | |
| off | off | INIT | | |
| • • • | | | | |
| slow | off | DISABLE | | |
| on | off | ENABLE | | |
| 2x | off | STOPPING; STO | OP STANDSTILL | |
| off | 1x | ERROR | +Vcc Overvoltage Error+Vcc Undervoltage Error+5 VDC Undervoltage Error | |
| off | 2x | ERROR | Thermal Overload ErrorOvercurrent ErrorPower Stage Protection Error | |
| off | 4x | ERROR | PWM Set Value Input out of Range Error | |
| off | 5x | ERROR | Hall Sensor Pattern ErrorHall Sensor Sequence ErrorHall Sensor Frequency too high Error | |
| off | on | ERROR | Auto Tuning Identification Error Internal Software Error | |
| slow on off | | | | |
| | | | | |
| 2x | | | | |
| 4x | | | | |
| 5x | | | | |

Table 3-24 LEDs – Interpretation of Condition

4 Wiring

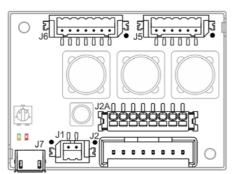


Figure 4-22 Interfaces – Designations and Location



Remark

The subsequent diagrams feature these signs:



PCB mounting hole



Ground safety earth connection (optional)

4.1 maxon EC motor with Hall Sensors

HEADER J2 Power J1 Supply J2 EC +10...36 VDC Motor 2 1 Hall sensor 2 Hall sensor Digital I/O Analog I/O J6 J2A USB J7 VBUS maxon motor control ESCON 36/3 EC

Figure 4-23 maxon EC motor with Hall Sensors (J2)

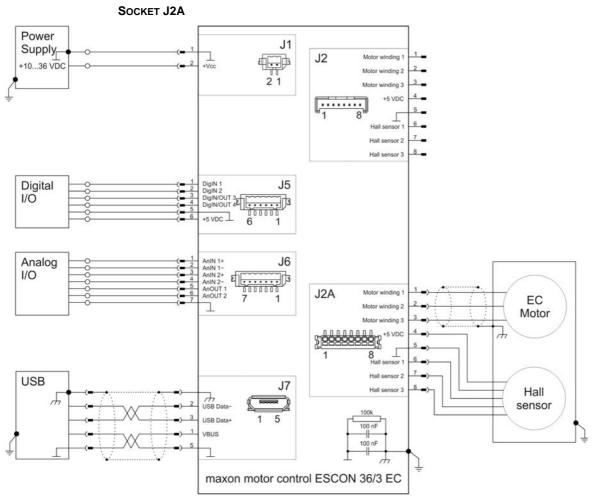


Figure 4-24 maxon EC motor with Hall Sensors (J2A)

4.2 maxon EC motor with Hall Sensors and Flexprint Cable (FPC)

HEADER J2 / ADAPTER BLACK (J2 TO FPC 11 POLE)

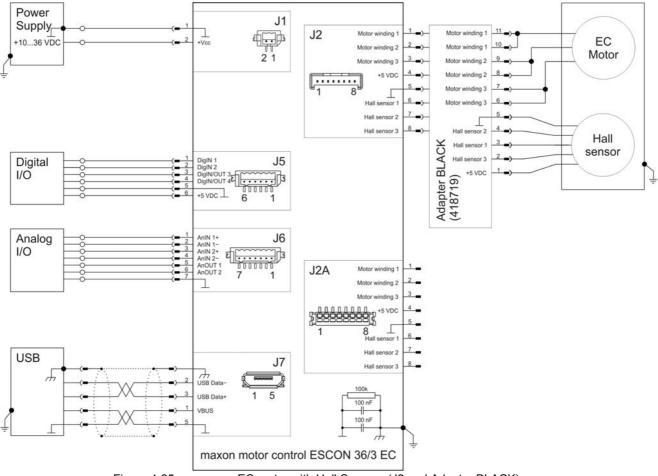


Figure 4-25 maxon EC motor with Hall Sensors (J2 and Adapter BLACK)

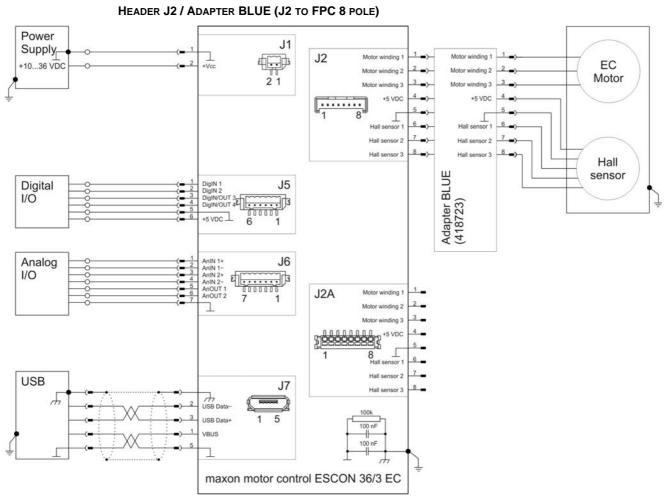


Figure 4-26 maxon EC motor with Hall Sensors (J2 and Adapter BLUE)

HEADER J2 / ADAPTER GREEN (J2 TO FPC 8 POLE) Power J1 Supply J2 2 1 +10...36 VDC EC Motor Adapter GREEN (418721) Hall sensor Digital I/O J6 Analog 1/0 J2A USB J7 maxon motor control ESCON 36/3 EC

Figure 4-27 maxon EC motor with Hall Sensors (J2 and Adapter GREEN)

LIST OF FIGURES

| Figure 2-1 | Derating Output Current | 8 |
|-------------|---------------------------------------------------------------------------|----|
| Figure 2-2 | Dimensional Drawing [mm] | 8 |
| Figure 3-3 | Power Socket J1 | 14 |
| Figure 3-4 | Motor / Hall Sensor Header J2 | 15 |
| Figure 3-5 | Motor / Hall Sensor Socket J2A | 16 |
| Figure 3-6 | Hall Sensor Input Circuit (analogously valid also for Hall Sensors 2 & 3) | 17 |
| Figure 3-7 | Digital I/Os Socket J5 | 18 |
| Figure 3-8 | DigIN1 Circuit | 19 |
| Figure 3-9 | DigIN2 Circuit | 19 |
| Figure 3-10 | DigIN3 Circuit (analogously valid also for DigIN4) | 20 |
| Figure 3-11 | DigOUT3 Circuit (analogously valid also for DigOUT4) | 20 |
| Figure 3-12 | DigOUT3 Wiring Examples (analogously valid also for DigOUT4) | 21 |
| Figure 3-13 | Analog I/Os Socket J6 | 22 |
| Figure 3-14 | AnIN1 Circuit (analogously valid also for AnIN2) | 23 |
| Figure 3-15 | AnOUT1 Circuit (analogously valid also for AnOUT2) | 23 |
| Figure 3-16 | USB Socket J7 | 24 |
| Figure 3-17 | Adapter BLACK FPC11poles | 25 |
| Figure 3-18 | Adapter BLUE FPC8poles | 26 |
| Figure 3-19 | Adapter GREEN FPC8poles | 26 |
| Figure 3-20 | Potentiometer P1 – Location & Adjustment Range | 27 |
| Figure 3-21 | LEDs – Location | 28 |
| Figure 4-22 | Interfaces – Designations and Location | 29 |
| Figure 4-23 | maxon EC motor with Hall Sensors (J2) | 30 |
| Figure 4-24 | maxon EC motor with Hall Sensors (J2A) | 31 |
| Figure 4-25 | maxon EC motor with Hall Sensors (J2 and Adapter BLACK) | 32 |
| Figure 4-26 | maxon EC motor with Hall Sensors (J2 and Adapter BLUE) | 33 |
| Figure 4-27 | maxon EC motor with Hall Sensors (J2 and Adapter GREEN) | 34 |

LIST OF TABLES

| Table 1-1 | Notation used | 3 |
|------------|--------------------------------------------------------------|----|
| Table 1-2 | Symbols & Signs | 4 |
| Table 1-3 | Brand Names and Trademark Owners | 4 |
| Table 2-4 | Technical Data | 8 |
| Table 2-5 | Standards | 9 |
| Table 3-6 | Cable Selector | 13 |
| Table 3-7 | Power Socket J1 – Pin Assignment & Cabling | 14 |
| Table 3-8 | Power Cable | 14 |
| Table 3-9 | Motor / Hall Sensor Header J2 – Pin Assignment & Cabling | 15 |
| Table 3-10 | Motor / Hall Sensor Header J2 – Specification & Accessories | 15 |
| Table 3-11 | Motor / Hall Sensor Socket J2A – Pin Assignment & Cabling | 16 |
| Table 3-12 | Motor / Hall Sensor Socket J2A – Specification & Accessories | 16 |
| Table 3-13 | Digital I/Os Socket J5 – Pin Assignment & Cabling | 18 |
| Table 3-14 | I/O Cable 6core | 18 |
| Table 3-15 | Analog I/Os Socket J6 – Pin Assignment & Cabling | 22 |
| Table 3-16 | I/O Cable 7core | 22 |
| Table 3-17 | USB Socket J7 – Pin Assignment & Cabling | 24 |
| Table 3-18 | USB Type A - micro B Cable | 24 |
| Table 3-19 | Adapters for Flexprint Cables | 25 |
| Table 3-20 | Adapter BLACK FPC11poles – Pin Assignment | 25 |
| Table 3-21 | Adapter BLUE FPC8poles – Pin Assignment | 26 |
| Table 3-22 | Adapter GREEN FPC8poles – Pin Assignment | 26 |
| Table 3-23 | ESCON 36/3 EC Connector Set – Content | 27 |
| Table 3-24 | LEDs – Interpretation of Condition | 28 |

INDEX

| A | 0 |
|-----------------------------------------------------------------------------------|---------------------------------------------------|
| adapters for J2 25 | operating license 11 |
| additionally applicable regulations 5 | operating status, display 28 |
| alerts 3 | order numbers |
| analog inputs 23 | 403112 7 |
| applicable EU directive 11 | 403957 14 |
| C | 403964 22 403965 18 |
| С | 403968 24 |
| cables (prefab) | 418719 25 |
| I/O Cable 6core 18 I/O Cable 7core 22 | 418721 25 |
| Power Cable 14 | 418723 25 |
| USB Type A - micro B Cable 24 | 425255 27 |
| country-specific regulations 5 | Р |
| _ | performance data 7 |
| D | potentiometer P1 27 |
| digital inputs 19, 20 | precautions 5 |
| _ | prerequisites prior installation <i>11</i> |
| E | prohibitive signs 3 |
| error display 28 | purpose |
| ESD 5 | of the device 4 |
| EU directive, applicable 11 | of this document 3 |
| F | R |
| flexprint cable, adapter for 25 | regulations, additionally applicable 5 |
| FPC (flexprint cable) 25 | |
| | S |
| Н | safety alerts 3 |
| how to | safety first! 5 |
| calculate required supply voltage 12 | signs used 3 |
| choose adapter for flexprint cable 25 find information on wiring 13 | sockets |
| interpret icons (and signs) used in the document 3 | J1 14 J2 15 |
| morprotisens (and eight) about in the about the | J2A 16 |
| 1 | J5 18 |
| incorporation into surrounding system 11 | J6 22 |
| informatory signs 4 | J7 24 |
| intended purpose of the device 4 | standards, fulfilled 9 |
| interfaces, location and designation 29 | status display 28 status LEDs 28 |
| _ | supply voltage, required 12 |
| L | symbols used 3 |
| LEDs 28 | Symbols used 5 |
| М | Т |
| | technical data 7 |
| mandatory action signs 3 | tools, recommended 27 |
| N | U |
| notations used 3 | USB interface 24 |

© 2015 maxon motor. All rights reserved.

The present document – including all parts thereof – is protected by copyright. Any use (including reproduction, translation, microfilming, and other means of electronic data processing) beyond the narrow restrictions of the copyright law without the prior approval of maxon motor ag, is not permitted and subject to prosecution under the applicable law.

maxon motor ag

Brünigstrasse 220 P.O.Box 263 CH-6072 Sachseln Switzerland

Phone +41 41 666 15 00 Fax +41 41 666 16 50

www.maxonmotor.com